


## Lap Timer System RCA10

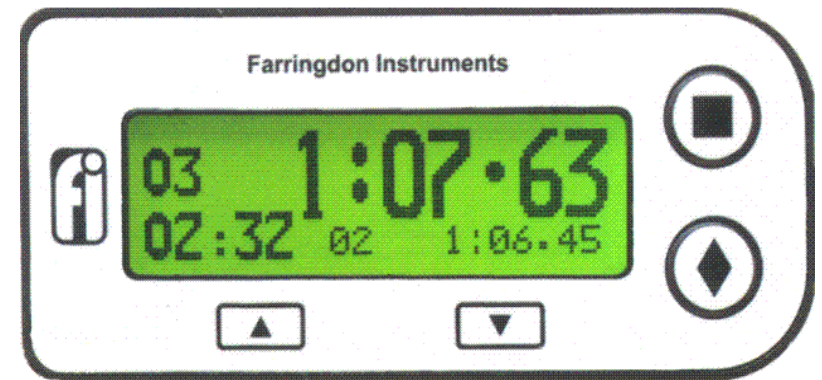

## Instruction Manual

Farrington Instruments Limited

Farrington Instruments Limited  
Unit 9 Oriol Court – Omega Park – Alton – Hampshire GU34 2YT  
Telephone 01420 541591 – Facsimile 01420 587212

## Contents

1. Introduction
2. Quick Installation
  - 2.1 Mounting the System Components
  - 2.2 Aligning and Positioning the Beacon
  - 2.3 Setting Channel Numbers
  - 2.4 Setting Hold and Blank Times
  - 2.5 Timing Mode
  - 2.6 Clearing Lap Count and Elapsed Time
  - 2.7 Best lap Display
  - 2.8 The IN Function
3. Detailed Instructions
  - 3.1 Modes of Operation
  - 3.2 Set Up Mode
    - 3.2.1 Session Number
    - 3.2.2 Driver Code
    - 3.2.3 Track Code
    - 3.2.4 Main Channel
    - 3.2.5 IN Channel
    - 3.2.6 Hold Time
    - 3.2.7 Blank Time
    - 3.2.8 Back Light
    - 3.2.9 Back Light Hold
    - 3.2.10 Clear Memory
    - 3.2.11 Set Defaults
    - 3.2.12 Hours Mins
  - 3.3 Timing Mode
    - 3.3.1 Lap Time
    - 3.3.2 Lap Count
    - 3.3.3 Elapsed Time
    - 3.3.4 Best Lap
    - 3.3.5 The IN Display
  - 3.4 Recall Mode
    - 3.4.1 Moving Through Stored Laps
    - 3.4.2 Memory Wrap
  - 3.5 Up Load Mode
    - 3.5.1 Preparing Your PC
    - 3.5.2 Starting Up Load
    - 3.5.3 Processing the Data
4. Power Considerations
  - 4.1 Battery Capacities and System Consumption
  - 4.2 Rechargeable Battery Kit

## 10. Technical Specification

### Optical

Beacon Peak Infra Red wavelength	950 nm
Beacon Spectral half bandwidth	50 nm
IR Detector wavelength maximum sensitivity	950 nm
IR Carrier frequency	56 KHz

System Range	50 m min. 100 m typ.
--------------	-------------------------

### Electrical

Battery Type for Junction Box	PP3	8.4 or 9 volts
Battery Type for Beacon	PP3	8.4 or 9 volts

Car supply voltage (when rechargeable battery fitted) 12 volts nominal  
Note: Supply can vary from 0 volts to +24 volts without damage to the system.

### Current drain

Lap Timer without Back Light	15 mA
Lap Timer with Back Light On	70 mA
Beacon on Channels 1, 2, 3 or 4	15 mA

### Environmental

Temperature	0 to 70° Celsius
Vibration (Lap Timer) operational	0.5 g
Shock (Lap Timer) operational	3 g

### EMC

Meets the requirements of 95/54/EC:1995 Annex VII, Annex VIII and Annex IX Appendices 2 and 4 Emissions and Immunity Incorporating ISO 7637-1: 1990 (Selected parts – includes "Load Dump")

## 9. Troubleshooting

Use the following table to identify and fix any problems you find.

Symptom	Possible Cause	Try....
No Display (Battery only supply)	Battery flat	Replace battery
No display (Rechargeable battery kit fitted)	No charging supply	Check connections to car 12 volt supply
Battery lasts for very short time	Back Light on constantly	Use Set Up Mode to change settings - see section 3.2.8
Beacon not detected		First try at close range away from other beacons
	Beacon battery flat	Check battery voltage - see section 5.3
	Beacon or IR Detector not aligned	Check alignment - see section 5
	Beacon interference	Check for other interfering beacons - make sure your beacon is further than 5 metres away from others
	Beacon and Lap Timer set to different Main Channels	Use Set Up Mode to set channels - see section 3.2.4 and 3.2.5
IN Beacon not detected		First check at close range away from other beacons
	IN Beacon positioned incorrectly	Make sure IN beacon is not seen while Lap Timer is in Blank Time - see section 3.3.5

- 5 Beacon Settings and Siting
  - 5.1 Understanding Infra Red Communications
  - 5.2 Aligning Beacon and IR Detector
  - 5.3 Beacon Conflicts
  - 5.4 Beacon Battery Voltage and IN Channel Display
6. Specific Information for Karts and Bikes
  - 6.1 Karts
  - 6.2 Bikes
7. Changing Batteries
  - 7.1 Junction Box
  - 7.2 Beacon
8. Adjusting Contrast
9. Trouble Shooting
10. Technical Specification

## 1. Introduction

Thank you for purchasing the Farringdon Instruments RCA10 Lap Timer System. It has been designed and developed by a group of keen club racers for cars, bikes and karts. We hope you will find the Lap Timer a helpful addition to your motor racing instrumentation.

Please read these instructions carefully. The Quick Installation section will provide you with all the information you need to install the system and to use its basic facilities. However, we would recommend that you read section 5 before you try the system on the track. Section 3 provides you with the details that you will need to use all the facilities of the system.

These instructions have been written for systems installed in cars but Section 6 gives specific information for Karts and Bikes.

The RCA10 Lap Timer has been manufactured to the highest commercial quality standards but should be treated carefully. For example the liquid crystal display is rated at no more than 0.5g *vibration* and 3g shock in operation (2g vibration and 50g shock non operational) so please use the recommended mounting methods or better.

## 2. Quick Installation

This section explains how to mount the Lap Timer and the Beacon and to set up the system for the track.

### 2.1 Mounting the System Components

The Lap Timer consists of the following components:

- The Display Head
- The Junction Box
- The Infra Red Detector (IR Detector)
- The Beacon

The first three in the list above are mounted in the car by means of the 3M Dual Lock tape. This tape is compliant and insulates the components from harsh vibration which may damage the system.

**WARNING** The 3M VHB acrylic adhesive on the Dual Lock tape is very powerful and cannot be removed easily.

- 1 Fit the **Display Head** so that the driver will look at it square on, this will help minimise the reflections in the display window. Position it so that it will be seen against the car's interior. Fitting it on top of the dash so that it is seen against a background of the windscreen and sky will make it more difficult to read. Use the Dual Lock tape making sure that the back of the display and the mounting surface to be used on the car are free from grease.
- 2 The **Junction Box** should be mounted by means of the Dual Lock tape in a position protected from the wet and excessive heat and where the ON - OFF switch can be reached easily. It will be necessary to remove the top of the Junction Box to fit a new battery if you do not have the Rechargeable Battery Kit and a 12 volt supply from the car. Make sure that the cables from the display and the IR Detector can reach it.

**WARNING** Be sure that the Junction Box is securely fixed and cannot come loose and move around the floor of the car and interfere with the driver's controls.

Do not attempt to extend either of the cables. Use an extension cable supplied by Farringdon Instruments.

- 3 Now choose the position for the **IR Detector**. If possible try to find a position where the Detector can be changed round to face either side of the track (Left hand side at Donington, right hand side at Silverstone).

## 8. Adjusting the LCD Contrast

The Liquid Crystal Display (LCD) contrast is adjustable through an access hole in the back of the display head. This has been provided for manufacturing purposes and it is unlikely that you will need to adjust the LCD contrast in normal use. The contrast is temperature dependent and if the display is left standing in the sun, it may become very dark. Before adjusting the contrast, cool the display down to normal running temperature to see if the contrast returns to an acceptable level.

However, you may find a clearer display is possible with fine tuning of the contrast control. If you are using the backlight, slightly more contrast may improve the display. To adjust the contrast, remove the sticker covering the access hole and use a 2 mm width screwdriver to very gently turn the adjusting potentiometer.

**Be sure to re-seal the access hole after you have made the adjustment.**

## 6. Specific Information for Karts and Bikes

In principle there is no difference in the operation of the Lap Timer on a kart or bike but there are some aspects that should be considered carefully to ensure reliable results.

### 6.1 Karts

Problems can arise from the relatively compact and convoluted nature of kart tracks. The beacon may be able to be seen from more than place on the track. Remember the range of the system can be as much as 100 metres. If a position cannot be found where the kart sees the beacon just once, the power of the beacon will have to be reduced by putting filters over the IR Detector. These are available from Farringdon Instruments. Many kart circuits now have PI beacons permanently installed so these can be used by setting the Main Channel to 000.

### 6.2 Bikes

Motor cycles are able to use the Lap Timer but the beacon must be positioned on a straight where the bike is near vertical. If this is not possible, special lenses can be supplied which increase the angle of reception in the vertical plane. Call for details. Some weather proofing of the Junction Box may be necessary – placing it in a small plastic bag is a simple and effective method.

## 7. Changing Batteries

### 7.1 Junction Box

The battery that powers the in-car electronics is fitted in the Junction Box. To change this battery, first remove the four screws securing the top of the Junction Box. Carefully remove the battery, disconnect the contacts and re-fit the new battery. Make sure the wires from the contacts are not trapped under the lid of the Junction Box and refit the lid.

**WARNING Do not fit primary cell batteries in the Junction Box if you are using the car 12 volt supply. Always fit rechargeable batteries when you are using the vehicle 12 volt supply.**

### 7.2 Beacon

To change the battery in the beacon, remove the battery cover screw, remove the battery cover and change the battery. Make sure that the wires to the battery connector are neatly routed and re-fit the battery cover. Ensure that it is properly fitted at the edge secured with small plastic tongues. Any type of 8 to 9 volt battery can be fitted to the Beacon.

The detector should be mounted at a similar height as the Beacon of the pit wall. The detector has an acceptance angle of only about plus and minus 7.5 degrees and should be mounted so that the Beacon will be “in view” when the car is on either side of the track.

- 4 Plug the Display Head and IR Detector cables into the Junction Box and secure the cables. The plugs are not locked into the Junction Box but will stay in place providing the cables are secured close to the Junction Box.

### 2.2 Aligning and Positioning The Beacon

The Beacon beam diverges at about plus and minus 20 degrees (see section 5) although scattered infra red light from the front window will be sufficient to operate the system when the car is very close (less than a metre). **Make sure that you position your beacon at least 5 metres from any other, including the permanently installed PI beacon.**

**WARNING** The relatively small and light Beacon is easily moved or even knocked off the pit wall - secure it from accidental knocks - it is large enough to cause serious damage to the car and possible injury to the driver if it falls in the path of a car.

### 2.3 Setting Channel Numbers

The Beacon has 4 channels and the IN channel. It transmits coded infra read signals corresponding to the setting of the Beacon Control Knob. For the Lap Timer to react to these codes, it must know the channels you are using. To set the channels:

- 1 Turn on the switch on the Junction Box. The display will show a running time.
- 2 Press the **■** and the **◆** buttons on the display at the same time. The top level menu will be displayed.
- 3 Move the highlighted area to SETUP by means of the **▲** and **▼** keys and then press the **■** key. This causes the Set Up Mode to be entered and the first setting — the Session Number to be displayed. (Section 3.2 describes the full set up procedure)
- 4 Press the **■** button repeatedly until “Main Channel 001” is displayed. Switch the Beacon to the channel you wish to use and point it at the IR Detector. The number on the display will change to the channel number set on the Beacon.
- 5 Move the Beacon away from the Detector and press the **■** button again. “IN Channel 002” will be displayed. Switch the Beacon to the IN position and point it at the Detector. Once the display shows the new IN channel number, move the Beacon away and press the **◆** button to leave Set Up mode and save the new settings.

## 2.4 Setting Hold and Blank Times

The Hold Time is the time that the display remains static after passing the Beacon. This should be set so that the display is still static at a point on the track where the driver can safely look at it. After the hold time has expired, the display will show the time into the current lap. If the Hold Time is set to a time longer than the lap time, then the display will show the last lap time until the beacon is seen again.

The Blank Time is the time that the IR Detector is effectively switched off after seeing the correct beacon. This should be set to a time that would cover the length of the pit wall so any other beacons set to the same channel will not be taken as the end of the lap.

- 1 Press the **■** and the **◆** buttons on the display at the same time. The top level menu should be displayed.
- 2 Move the highlighted area to SETUP by means of the **▲** and **▼** keys and then press the **■** key. This causes the Session Number to be displayed.
- 3 Press the **■** button repeatedly until "Hold Time 030" is displayed. Change the time (which is in seconds) with the **▲** and **▼** buttons until the required is reached.
- 4 Press the **■** button again which will display the Blank Time. Adjust this in the same way.
- 5 Press the **◆** button to leave Set Up Mode and save the new settings.

## 2.5 Timing Mode

Timing mode is entered when the system is first switched on or from the top level menu by selecting Timing Mode. The display shows the number of laps completed, the elapsed time of the run, the best lap and the lap time as shown below.



## 5.4 Beacon Battery Voltage and IN Channel Display


The visible red LED on the top of the beacon gives you information about itself as follows. When the beacon is first turned from OFF to Channel 1 three groups of LED flashes can be seen. The number of each group represents a digit of the IN Channel coded into the beacon during manufacture. As any of these digits could be zero, the number of flashes is the digit plus one. So for example, if the LED flashed twice, then after a short pause another three and finally after a further pause a single flash, the IN Channel code would be 120. (2-1=1, 3-1=2 and 1-1=0)

After the IN code has been indicated, the beacon continually flashes the LED in bursts, where the number of flashes is the battery voltage - 7 flashes means 7 volts. The battery should be discarded or recharged once the voltage has fallen to 6 volts.

It is especially important to site the Beacon away from other beacons using large external batteries and having a large array of LEDs pointing over the track. These probably emit very strong IR signals which will saturate your Lap Timer.

### 5.3 Aligning The Beacon and IR Detector

The Beacon Beam diverges at 40 degrees and the IR Detector acceptance cone angle is about 15 degrees. Ensure that the IR Detector will fall within the Beacon's beam and, just as important, be sure that the acceptance cone of the IR Detector includes the Beacon when the car passes it.

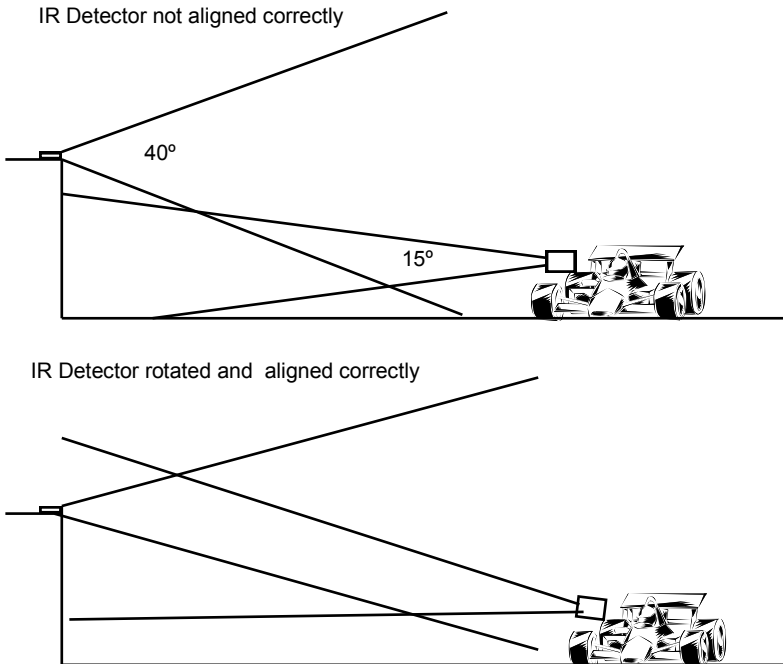

### 2.6 Clearing the Lap Count or Elapsed Time


There may be some time between switching on the system and the start of a timed session on the track. Pressing the **◆** button on joining the track clears the elapsed time display so that it now shows the elapsed time of the track session. Similarly, pressing the **■** button after parade and green flag laps clears the lap count so that the count now shows race laps completed.

### 2.7 Best Lap Display

The Best lap display shows the lap number and lap time of the shortest lap time recorded in the run. The lap number is cleared on switch-on but the time is remembered and has to be deliberately cleared by pressing the **■** button when prompted shortly after switch on. The first lap (the "out" lap) is never counted - that is the time between switch on (or pressing either the **■** or **◆** buttons) and the first pass of the Beacon.

### 2.8 The IN Function

Switching the Beacon Control Switch to the IN position will cause the display to flash:

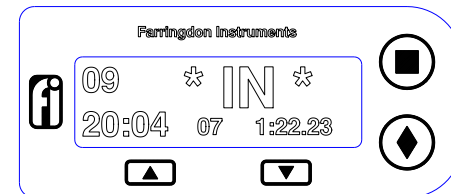

The display will return to Timing Mode when the next Beacon set to the Main Channel is seen. If the IN command from the Beacon is received during the Hold Time, it is not considered as an of lap beacon. (See section 5.)

### 3. Detailed Instructions

#### 3.1 Modes of Operation

The RCA10 Lap Timer operates in one of the following modes:

Timing Mode  
Set Up Mode  
Recall Mode  
Up Load Mode


Apart from setting up the essential parameters (channel numbers and hold time for example) in Set Up Mode, and using the Timing Mode on the track, the system will prove very useful without ever entering the other two modes.

However Recall Mode allows you to look back through the laps recorded and the Up Load mode provides a method of transferring the recorded lap times to a computer for logging and tabulating.

The following sections describe each mode in detail.

#### 3.2 Set Up Mode

Set Up Mode allows the various parameters of the lap timing system to set according to your needs. To enter Set Up Mode, press both the **■** and **◆** keys together to reach the top level menu. Move the highlighted area with the **▲** and **▼** keys to Set Up and press the **■** key.

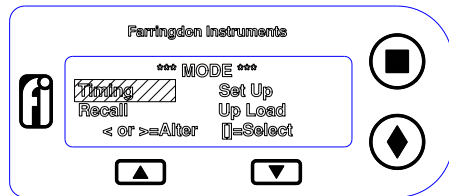

In Set Up Mode, the **■** key enters the data shown and moves on to the next parameter. The **▲** and **▼** keys adjust the value displayed and the **◆** key causes all the parameters to be saved Set Up Mode to be terminated.


##### 3.2.1 Session Number

The Session Number is stored with each lap time. It does not affect the working of the system. The session number could relate to a different set-up of the car or a different test session.

### 5. Beacon Setting and Siting

#### 5.1 Understanding Infra Red Communications

Infra red light (IR) from light emitting diodes (LEDs) can be turned on and off very quickly and it is this property that makes infra red ideal for short range communications. To increase the sensitivity of the receivers, a “carrier” frequency is used to turn on and off the LED. The receiver can then look for light that is being modulated at this frequency amongst other background light. To impose information on the infra red beam, this carrier frequency is itself turned on and off.

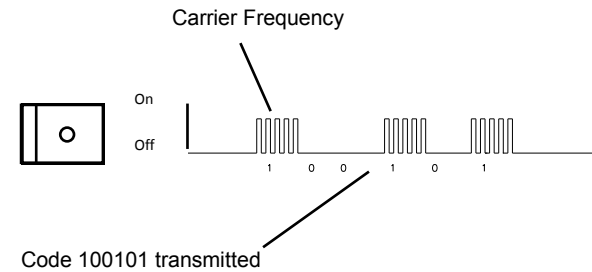

There are two ways in which this form of communication can be interrupted, first, by any light source strong enough to saturate the receiver - for example - the sun or another more powerful IR source - and second, other transmissions using the same carrier frequency.

The reason for the recessed lens and photodiode in the IR detector is to shield it from direct sunlight so providing the IR detector will not “see” the setting sun behind the beacon, it will not be saturated by the sun.

However, some other lap timer and data logging systems do use the same carrier frequency and others use much more powerful IR beams and it is for this reason that you must take care where the beacon is positioned.

#### 5.2 Beacon Conflicts

**From the explanation given in the previous section it is clear that reliable operation can only be guaranteed when the beacon is sited away from all others. A distance of 5 metres along the pit wall is probably safe.** The Lap Timer will ignore all infra red signals on the same carrier frequency that do not contain the Main Channel or IN codes saved in its memory but if you find that lap times are obviously incorrect, look for another Beacon using your channel on the pit wall. With only four channels to choose from, it may be that more than four teams are using Beacons at the same track. In this case agree to use a single beacon and set all the Lap Timers to respond to this channel.



## 4. Power Considerations

### 4.1 System Consumption and Battery Capacities

The following table provides a guide to the running time you can expect from various types of battery. The capacity of batteries depends on their usage - for example several short sessions will use less capacity than one long session - so treat the table as a guide only. Further, the performance of the beacon will decrease with battery voltage so that the range will decrease to about 70% when the battery is close to discharged.

The approximate current drain for the Lap Timer without Back Light is 12 mA. With Back Light it is approximately 62 mA. The Beacon consumes about 15 mA.

Battery Type	Typical Run Time (hours) for Lap Timer			Typical Run Time for Beacon (Hrs)
	Back Light Off	Back Light On for 50% Time	Back Light On	
Alkaline	33	12	8	33
Lithium	80	30	20	80
Rechargeable NiMH	10	3	2	10

### 4.2 Rechargeable Battery Kit (Part Number RCA15)

If the Back Light is going to be used, by far the best way to power the Lap Timer is through a rechargeable battery and a power input from the car. The battery will support all the Set Up, Recall and Up Load functions and will protect the electronics from power dips when starting but the car supply will keep the battery fully charged.

The charging current to the battery is about 6 mA which should be added to the lap timer consumption of 62 mA with Back Light on.

If the Back Light is not used, Alkaline Batteries provide a reliable and simple way to power the system.

### 3.2.2 Driver Code

As with Session Number, Driver Code does not alter the way the system operates and is simply a code stored with each lap.

### 3.2.3 Track Code

The track code is another user parameter that is simply stored with each lap time and available for later processing.

### 2.4 Main Channel

The Beacon transmits a beam of infra red light encoded with a channel number. This channel number depends on the Beacon Control Knob setting and can be from 1 to 4 inclusive. The Lap Timer will respond to the channel number set as its Main Channel Number.

Set the main Channel Number to the channel number that you are going to use on the Beacon.

The Lap Timer will set this channel automatically if you point the beacon (set to the channel you wish to use) at the IR Detector when the Main Channel is shown on the display in Set Up Mode. Once channel number is displayed on the Lap Timer, you will have to point the Beacon at the ground so that the IR Detector is not receiving the channel code before being able to move on to the next set up item.

*NOTE Setting the Main Channel number to 0 will allow the system to respond to PI System 1 beacons. These are installed at many Kart tracks and at motor racing circuits during some test days and meetings.*

### 3.2.5 IN Channel

When the IN Channel position on the Beacon is selected, a special code is transmitted which causes the IN display to be triggered in the car. This special code is assigned to the Beacon during manufacture and is one of a set of 200. Although not impossible, it is very unlikely that your Beacon IN channel is the same as another Beacon being used at the same time.

For the Lap Timer to respond to the IN code it must be set in its memory. You can find out what the IN channel of your beacon is by watching the visible LED when you switch it on (see Section 5), but the Lap Timer will set this code automatically if you point the Beacon, set to the IN channel, at the IR Detector when the IN Channel is shown on the display in Set Up Mode. Once the IN code is displayed on the Lap Timer, you will have to point the Beacon at the ground so that the IR Detector is not receiving the IN code before being able to move on to

the next set up item.

### 3.2.6 Hold Time

The lap time is frozen on the display from the time the Beacon is seen by the IR Detector for the Hold Time. If the Hold Time is set to longer than the lap time, the display will show the last lap time all the time, but if it is adjusted to hold the lap time until a convenient point on the circuit, the display will revert to the running time of the current lap so that the driver can see his time at other points on the circuit.

### 3.2.7 Blank Time

The blank time is the time that the IR Detector is turned off after seeing a beacon set to the Lap Timer Main Channel setting. This prevents other beacons set to the same channel from "ending" the lap just started. If interfering beacons are set around the circuit, this may have to be set to a time that will allow the car to pass all the beacons. More usually, 10 seconds will be adequate.

### 3.2.8 Back Light

The Lap Timer display is fitted with an LED back light which illuminates the liquid crystal display from behind. It consumes between 5 and 10 times the current (> 50 mA) of the rest of the in-car electronics but does make the display easier to read in closed cars. It makes little difference in open cars (unless running in the dark!). This option in Set Up Mode allows you choose to have the Back Light on or off.

### 3.2.9 Back Light Hold

A way to have the Back Light on but to minimise power consumption is to set this option which lights the Back Light for the Hold Time only.

### 3.2.10 Clear Memory

The Lap Timer will hold over 1,500 lap times but when this is exceeded, the first laps are overwritten and only those laps from the start of memory can be *Recalled* or *Up Loaded*. It is sensible to clear the memory once the data stored in the lap timer has been up loaded or is no longer useful. **Do not confuse the lap times memory with the data logging memory. The lap times memory is NOT cleared when the data logging memory is reset for a new track.**


### 3.2.11 Set Defaults

Selecting Yes to this option sets the lap timer parameter to the default settings as

Session Number	000	Back Light On	No
Driver Code	000	Back Light Hold	No
Track Code	000	Clear Memory	No
Main Channel	001	Set Defaults	No
IN Channel	002	Hours Mins	No
Hold Time	030	Performance	No
Blank Time	010		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
	Lap Number	Lap Time	Session	Driver	Track	Spare	Lap Number	Lap Mins	Lap Number	Lap Mins	Time secs	Session	Driver	Track	Mileage
1	1	5251	0	2	3	0	0	1	0	52.51	0	0	Bob	Short	0.9
2	2	2985	0	2	3	0	0	2	0	29.85	0	0	Bob	Short	0.9
3	3	3015	0	2	3	0	0	3	0	30.15	0	0	Bob	Short	0.9
4	4	3015	0	2	3	0	0	4	0	30.15	0	0	Bob	Short	0.9
5	5	3015	0	2	3	0	0	5	0	30.15	0	0	Bob	Short	0.9
6	6	3016	0	2	3	0	0	6	0	30.16	0	0	Bob	Short	0.9
7	7	3015	0	2	3	0	0	7	0	30.15	0	0	Bob	Short	0.9
8	8	3014	0	2	3	0	0	8	0	30.14	0	0	Bob	Short	0.9
9	9	3015	0	2	3	0	0	9	0	30.15	0	0	Bob	Short	0.9
10	10	3016	0	2	3	0	0	10	0	30.16	0	0	Bob	Short	0.9
11	11	3014	0	2	3	0	0	11	0	30.14	0	0	Bob	Short	0.9
12	12	3015	0	2	3	0	0	12	0	30.15	0	0	Bob	Short	0.9
13	13	3016	0	2	3	0	0	13	0	30.16	0	0	Bob	Short	0.9
14	14	3014	0	2	3	0	0	14	0	30.14	0	0	Bob	Short	0.9
15	15	3015	0	2	3	0	0	15	0	30.15	0	0	Bob	Short	0.9
16	16	3016	0	2	3	0	0	16	0	30.16	0	0	Bob	Short	0.9
17	17	3015	0	2	3	0	0	17	0	30.15	0	0	Bob	Short	0.9
18	18	3016	0	2	3	0	0	18	0	30.16	0	0	Bob	Short	0.9
19	19	2045	1	2	1	0	0	19	0	20.45	1	0	Bob	Shorter	1.6
20	20	13225	1	2	1	0	0	20	2	12.25	1	0	Bob	Shorter	1.6
21	21	1962	1	2	1	0	0	21	3	19.62	1	0	Bob	Shorter	1.6
22	22	2009	1	2	1	0	0	22	4	20.09	1	0	Bob	Shorter	1.6
23	23	2011	1	2	1	0	0	23	5	20.11	1	0	Bob	Shorter	1.6
24	24	2010	1	2	1	0	0	24	6	20.1	1	0	Bob	Shorter	1.6
25	Totals	73709								12	17.09				24
26															
27															
28															
29															
30															
31															
32															
33															
34															

The data received by HyperTerminal will be displayed like this:

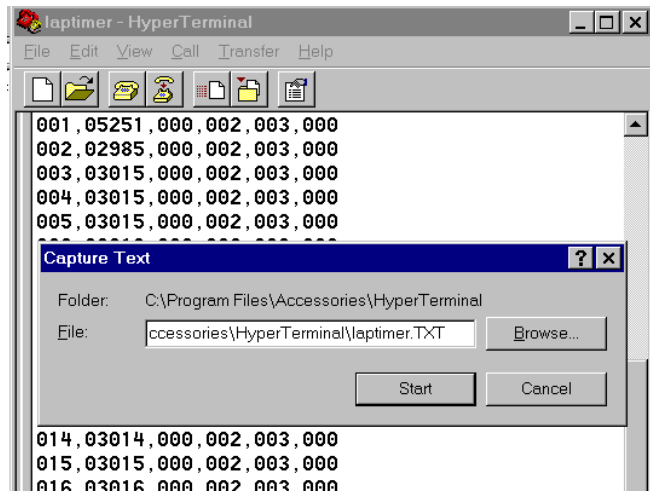

This shows 16 laps, most of which took about 30 seconds in session 0 with driver 2 and on track 3.

### 3.5.3 Processing the Data


To be able to make more use of this data, it should be transferred to a file. It can then be processed by your own program or imported into a spreadsheet such as Excel® where it can be reformatted, expanded and, if required printed.

shown below:  
3.2.12 Hours Mins

Selecting Yes for this option changes the elapsed time display from minutes and seconds to hours and minutes which is more helpful for endurance races.

### 3.3 Timing Mode

In Timing Mode the display changes to:

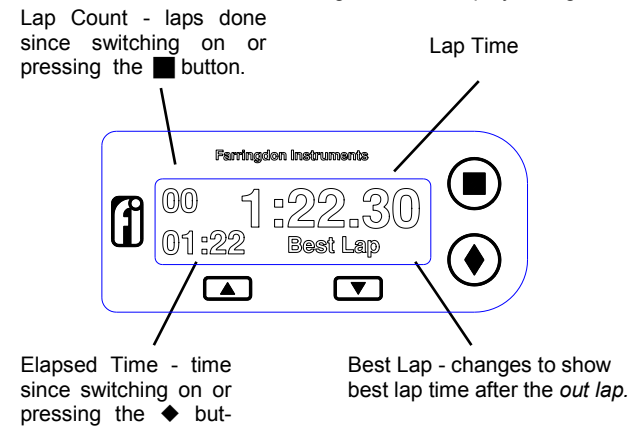

#### 3.3.1 Lap Time

The large characters show the lap time. This time starts at zero and increments until the Lap Timer receives an infra red signal from a beacon set to the Main Channel number. The time is then frozen on the display for the Hold Time. The resolution of the display is to 1/100 second but the last digit may be on the point of changing, so the time should be taken as having a tolerance of plus or minus 1/100 seconds. Slight variations in lap times will occur because of the spreading of the infra red beam so that a quicker time may be recorded if the beam is crossed close to the beacon first and then on the far side of the track for the second time. The lap time rolls over from 9 minutes, 59.99 seconds back to zero.

### 3.3.2 Lap Count

This display increments every time the correct code from a beacon is received. The number can be cleared by pressing the **■** key. If the beacon has been crossed before the start of a race on the parade lap and again on the warm-up lap, pressing the **■** button will clear the lap count in preparation for the start. The Laps Done count rolls over from 99 to 00.

### 3.3.3 Elapsed Time

This display simply shows the driver the time that has passed since the system was switched on or since the **◆** button was pressed. Pressing the **◆** button on joining the track for qualification or practice makes this display the elapsed time of the session. This time changes from its maximum of 59.99 back to 00.00. Depending on the set up option, the time is displayed in minutes and seconds or hours and minutes.


### 3.3.4 Best lap

The area on the display for the best lap time starts by showing the text "Best" followed by the remembered best lap time. The first or "out lap" is ignored (as this is determined by the time between resetting the lap count or elapsed time and seeing the beacon for the first time) but subsequent lap times are compared and the fastest displayed in the area. The best lap display is relatively small and may be difficult to read while driving, so the display reverses to become white characters on a black background every time a new best lap is achieved. This change is easy to see and indicates that the current lap time shown on the lap time display in large numbers, is the new best time.

**The best lap time can be reset by switching the system OFF and then ON and pressing the **■** button when prompted.** The best lap time will be reset to 9 minutes, 59.99 seconds. As it is easy to press this button by mistake when trying to enter Recall or another mode, the best lap is only reset permanently when the beacon is next seen. So be sure to reset the best lap just before joining the track when the lap timer will not be switched off before seeing the beacon. If an unrealistic best lap has been set by testing the system (in the pits for example) remember to reset it afterwards.

### 3.3.5 The IN Display


The lap time area of the display changes to \* IN \* when the lap timer receives a signal from the beacon switched to its IN position. (See Section 3.2.5 for details on setting the IN channel in the lap timer.) The IN display alternates with the lap

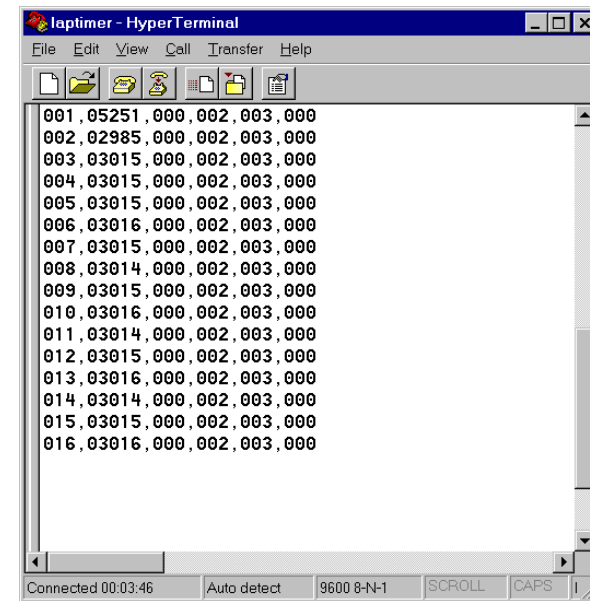

- 5 Click OK. The PC is now ready to receive data to the HyperTerminal screen.


### 3.5.2 Starting Up Load

The lap timer is supplied with a serial cable with a Mini DIN connector that connects to the Computer port on the Junction Box and a 9 way D type connector to connect into you PC. To start an Up Load from the lap timer to your PC connect the lap timer to the PC, press both the **■** and **◆** buttons at the same time and choose Up Load Mode. The screen will show the number of frames of data that are going to be transmitted. Press the **■** button and transmission will start and the PC screen will show the lap times being received. The data in each frame transmitted will be the lap number, the lap time in units of 1/100 seconds, the session number, the driver code and the track code.

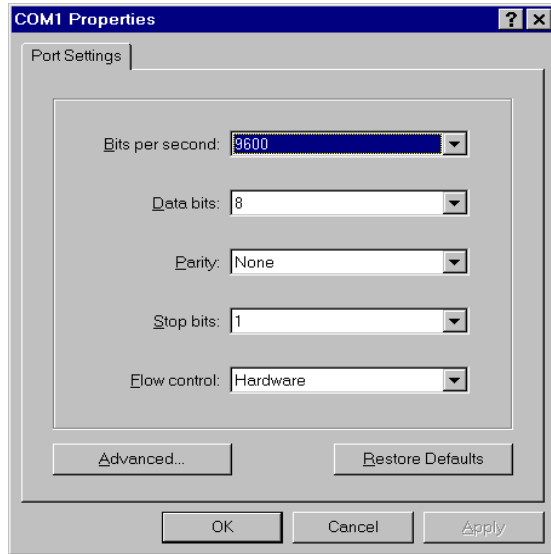


- 4 Click OK. The next dialogue box sets the serial line characteristics. It should be as shown below - 9600 bits per second, 8 bit data, no parity and 1 stop bit:

time to give a flashing display to attract the driver's attention.

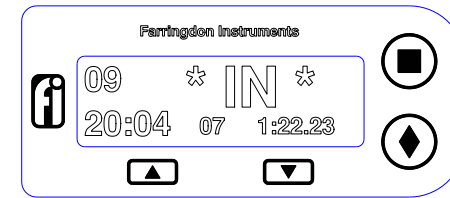

The Lap Timer will respond to an IN signal during the Hold Time but not during the Blank Time. It is important, therefore, when sharing a beacon, to position your beacon transmitting the IN code, BEFORE the beacon being shared, or far enough after the shared beacon to be sure that the Blank Time has expired. If you are the only team using a particular channel, then the IN code will be treated as an end of lap code as well and the correct lap time will be saved in the system memory.

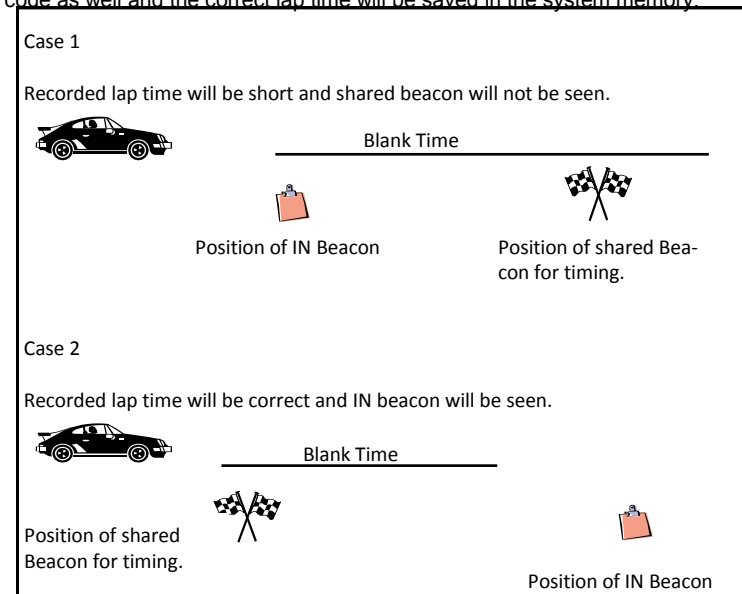


**WARNING** Before using the IN function during competition, make sure that the regulations allow you to do so. You may have to use a Pit Board after all!

### 3.4 Recall Mode

Recall mode provides a means of looking back over the lap times saved in the Lap Timer memory. NOTE that the Lap Timer memory is non-volatile and will keep parameters set in Set Up Mode and all lap times when the power is switched off.

#### 3.4.1 Moving Through Stored Laps

To enter Recall Mode, press the **■** and **◆** buttons at the same time to reach the top level menu. Use the **▲** and **▼** buttons to highlight Recall and select this mode by pressing the **■** button. The screen should change to something similar to:

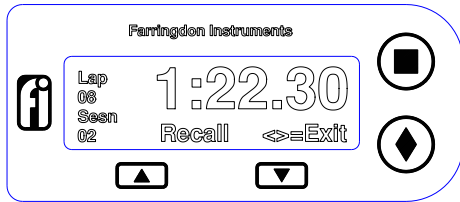

The display shows the last lap recorded. The **▲** button will select the previous lap and the **▼** button will retrieve the next lap. The display will not change if you try to display a lap after the last or one before the first. Note that the session number is displayed as well. To make the Recall (and the Up Load) mode more useful, it is worthwhile changing the session number every time the system is switched on and recording the details of the new session - car set up etc..

#### 3.4.2 Memory Wrap

The memory in the Lap Timer has the capacity to store more than 1,500 laps so it is unlikely to be filled very often. If the memory is filled, the start of the memory will be overwritten and the Recall and Up Load functions will be able to access only those laps from the start of memory up to the last saved lap. To avoid this happening, use the clear memory function at the start of a test or race day so that the memory will then contain just that days lap times.


### 3.5 Up Load Mode

Up Load Mode transfers the used memory of the Lap Timer via a serial interface to a personal computer (PC). The data is transferred in comma delimited field text format so that it can be imported to a spread sheet. You will need the PC Upload Cable to connect the RCA10 to your PC.

#### 3.5.1 Preparing Your PC

Before transferring the data from the lap timer to the PC, the PC must be waiting to accept the data. The data is in text format and can be collected with the standard Windows® 95 or 98 HyperTerminal® program. (The Terminal program provided with Windows 3 is very similar.) To set up the PC, follow these steps:

- 1 Start HyperTerminal - this is found under Programs-Accessories-(Communications in Windows 98)
- 2 Choose the File drop down menu and select New Connection and type in a suitable name for the connection - laptimer for example.
- 3 Click the Connect Using .... drop down box and select Direct to Com1 or

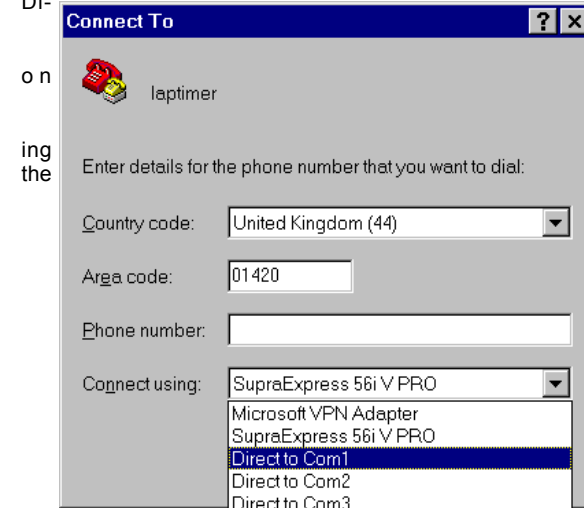

Direct to Com2 etc. depending the interface you are proposing to use on PC.